



Doc. No. 78-1757-01

## Attaching the AccessPro Software Feature Labels

---

This document explains where to attach the labels that accompanied the system-code single in-line memory module (SIMM) for your AccessPro PC card. The labels that accompanied your system-code SIMM provide important information for correct software maintenance and upgrade. The labels indicate which Cisco Internetwork Operating System (IOS) software feature is loaded on your AccessPro card. They should be attached to the AccessPro card and the back of your PC. Table 1 lists the labels and describes what they mean.

**Table 1 Description of Labels**

Label	Description
Licensed for DT	IOS Desktop feature set
Licensed for DT/IBM	IOS Desktop and IBM Base feature set
Licensed for EN	IOS Enterprise feature set
Licensed for IP	IOS IP <sup>1</sup> feature set
Licensed for IP/IBM	IOS IP and IBM feature set
Licensed for IP/IPX	IOS IP /IPX <sup>2</sup> feature set
Licensed for IP/IPX/IBM	IP/IPX and IBM Base feature set

1. IP = Internet Protocol.

2. IPX = Internetwork Packet Exchange.

Refer to your *Router Products Configuration Guide* for more information about a specific software feature set.

### Preventing Electrostatic Discharge Damage

Electrostatic discharge (ESD) is a discharge of stored static electricity that can damage equipment and impair electrical circuitry. It occurs when electronic components are improperly handled and can result in complete or intermittent failures.

Following are guidelines for preventing ESD damage:

- Before you open a chassis, ensure that power to the unit is off, but that the power cord is connected to the wall receptacle. Having the power cord connected ensures a ground path for any ESD voltages.
- Always use an ESD-preventive wrist or ankle strap and ensure that it makes good skin contact.
- Connect the equipment end of the strap to an unpainted surface of the chassis frame or another proper grounding point or surface. Attach it to the inside bottom of the chassis or to the rear panel (inside or outside) without making contact with any connectors or appliques.
- Avoid contact between equipment and clothing. The wrist or ankle strap only protects the equipment from ESD voltages on the body; ESD voltages on clothing can still cause damage.
- Handle printed circuit cards and appliques by the edges only; avoid touching the components, traces, or any connector pins.
- Place a removed card component side up on an antistatic surface or in a static shielding bag. If the component is being returned to the factory, immediately place it in a static shielding bag.
- Do not remove the wrist or ankle strap until the installation is complete.



**Caution** To avoid damaging the equipment, periodically check the resistance value of the antistatic strap. The measurement should be between 1 and 10 megohms (Mohms).

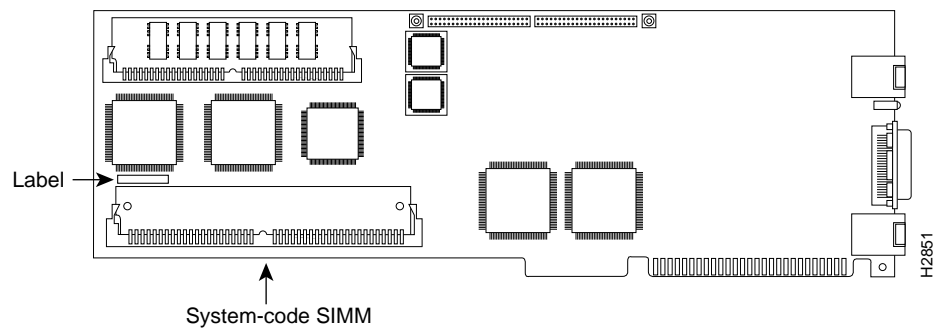
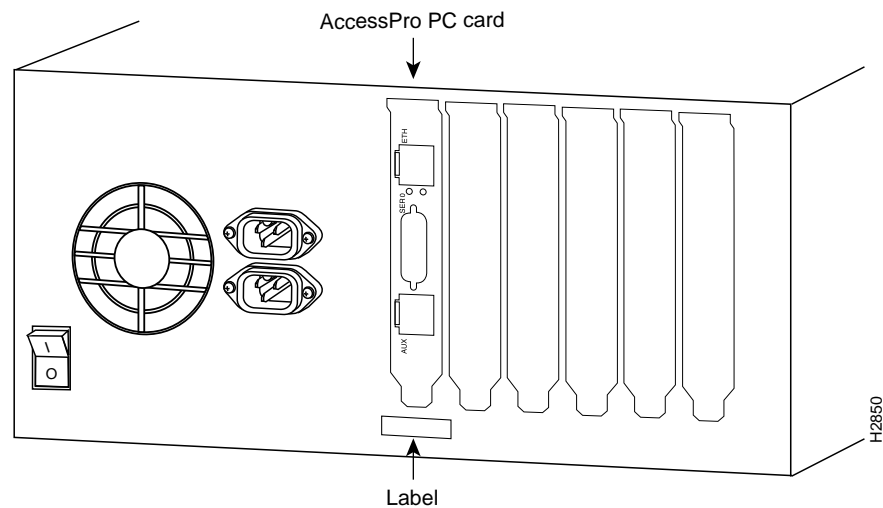
### Attaching the Label

One label is for the AccessPro card; the other label is for the PC. For prompt servicing of your AccessPro card, take the following steps to apply the labels:

- Step 1** Attach an ESD-preventive wrist strap.
- Step 2** Before installing the AccessPro card, attach one label as shown in Figure 1.
- Step 3** Install the AccessPro card following the instructions in the *AccessPro PC Card Installation* publication.
- Step 4** Locate the slot in which the AccessPro card is installed.
- Step 5** Attach another label on the back of your PC near the slot in which the AccessPro card is installed, as shown in Figure 2.



**Caution** Do not place the label on the faceplate of the AccessPro card.

**Figure 1 Attaching a Label to the AccessPro Card****Figure 2 Attaching a Label to the PC**

## Cisco Information Online

Cisco Information Online (CIO) is Cisco Systems' primary, real-time support channel. You can use your product serial number to activate CIO for a single user during your warranty period. Maintenance customers and partners can self-register on CIO to obtain additional content and services.

Available 24 hours a day, 7 days a week, CIO provides a wealth of standard and value-added services to Cisco's customers and business partners. CIO services include product information, software updates, release notes, technical tips, the Bug Navigator, configuration notes, brochures, descriptions of service offerings, and download access to public and authorized files.

CIO serves a wide variety of users through two interfaces that are updated and enhanced simultaneously—a character-based version and a multimedia version that resides on the World Wide Web (WWW). The character-based CIO (called "CIO Classic") supports Zmodem, Kermit, Xmodem, File Transfer Protocol (FTP), Internet e-mail, and fax download options, and is excellent for quick access to information over lower bandwidths. The WWW version of CIO provides richly formatted documents with photographs, figures, graphics, and video, as well as hyperlinks to related information.

You can access CIO in the following ways:

- WWW: <http://www.cisco.com>.
- Telnet: [cio.cisco.com](telnet://cio.cisco.com) (198.92.32.130).
- Modem: From North America, 408 526-8070; from Europe, 33 1 64 46 40 82. Use the following terminal settings: VT100 emulation; databits: 8; parity: none; stop bits: 1; and baud rates up to 14.4 kbps.

For a copy of CIO's Frequently Asked Questions (FAQ), contact [cio-help@cisco.com](mailto:cio-help@cisco.com). For additional information, contact [cio-team@cisco.com](mailto:cio-team@cisco.com).

---

**Note** If you are a network administrator and need personal technical assistance with a Cisco product that is under warranty or covered by a maintenance contract, contact Cisco's Technical Assistance Center (TAC) at 800 553-2447, 408 526-7209, or [tac@cisco.com](mailto:tac@cisco.com). To obtain general information about Cisco Systems, Cisco products, or upgrades, contact 800 553-6387, 408 526-7208, or [cs-rep@cisco.com](mailto:cs-rep@cisco.com).

---

---

This document is to be used in conjunction with the *AccessPro PC Card Installation* publication.

Access Without Compromise, Catalyst, CD-PAC, CiscoFusion, CiscoView, CiscoWorks, HyperSwitch, Internetwork Operating System, IOS, LAN<sup>2</sup>LAN, LAN<sup>2</sup>LAN Enterprise, LAN<sup>2</sup>LAN Remote Office, LAN<sup>2</sup>PC, Netscape, Newport Systems Solutions, PC<sup>2</sup>LAN/X.25, Point and Click Internetworking, SMARTnet, SynchroniCD, *The Packet*, UniverCD, WNIC, Workgroup Director, Workgroup Stack, and XCI are trademarks; Access by Cisco and Bringing the power of internetworking to everyone are service marks; and Cisco, Cisco Systems, and the Cisco logo are registered trademarks of Cisco Systems, Inc. All other trademarks, service marks, registered trademarks, or registered service marks mentioned in this document are the property of their respective owners.

Copyright © 1995, Cisco Systems, Inc.  
All rights reserved. Printed in USA.  
9411R