

# Installation Overview

---

This chapter describes the equipment and site requirements for installing the Catalyst 2900. It includes the power and cabling requirements that must be in place at the installation site and describes additional equipment you will need to complete the installation and the environmental conditions your site must meet to maintain normal operation. Instructions for unpacking the system and additional equipment are provided in the document *Unpacking Instructions*, which is attached to the outside of the shipping container.

This chapter includes information about the following preinstallation requirements:

- Safety Recommendations
  - Lifting the Chassis Safely
  - Safety with Electricity
- Site Requirements
  - AC Power
  - Plant Wiring (interference considerations and distance limitations)
  - Equipment Racks
  - Site Environment
  - Preventive Site Configuration
- Preparing Network Connections (optional and additional equipment such as connectors, cables, and media interface devices that you will need for connections to your Fast Ethernet)

## Safety Recommendations

---

- Unpacking and Repacking the System
  - Checking the Contents
  - Repacking the System



**Warning** Only trained and qualified personnel should be allowed to install or replace the Catalyst 2900. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”



**Warning** Read the installation instructions before you connect the system to its power source. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

## Safety Recommendations

The following guidelines will help to ensure your safety and protect the equipment. This list is not inclusive of all potentially hazardous situations that you may be exposed to as you install the switch, so *be alert*.

- Never try to lift the chassis by yourself; *two people are required* to lift the switch.
- Always unplug all power cords before installing or removing a chassis.
- Keep the chassis area clear and dust free during and after installation.
- Keep tools and chassis components away from walk areas.
- Do not wear loose clothing, jewelry (including rings and chains), or other items that could get caught in the chassis. Fasten your tie or scarf and sleeves.



**Warning** Metal objects heat up when connected to power and ground, and can cause serious burns. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

## Lifting the Chassis Safely

The switch chassis weighs 41 pounds. The chassis is not intended to be moved frequently. Before you install the switch, ensure that your site is properly prepared so you can avoid having to move the chassis later to accommodate power sources and network connections.

Two people are required to lift the chassis. Whenever you lift the chassis or any heavy object, follow these guidelines:

- Never attempt to lift the chassis by yourself. The size and weight of the chassis require two people to safely lift and move it without causing injury or damaging the equipment.
- Ensure that your footing is solid, and balance the weight of the chassis between your feet.
- Lift the chassis slowly; never move suddenly or twist your body as you lift.
- Keep your back straight and lift with your legs, not your back. If you must bend down to lift the chassis, bend at the knees, not at the waist, to reduce the strain on your lower back muscles. (See Figure 2-1.)
- Grasp the underside of the chassis exterior with both hands.



**Warning** Two people are required to lift the chassis. Grasp the chassis underneath the lower edge and lift with both hands. To prevent injury, keep your back straight and lift with your legs, not your back. To prevent damage to the chassis and components, never attempt to lift the chassis with the handles on the power supplies or on the interface processors, or by the plastic panels on the front of the chassis. These handles were not designed to support the weight of the chassis. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

- Always disconnect all external cables before lifting or moving the chassis.

**Figure 2-1      Unsafe Lifting Practices**



## Safety with Electricity

Follow these basic guidelines when working with any electrical equipment:

- Disconnect all power and external cables before installing or removing a chassis.
- Do not work alone when potentially hazardous conditions exist.
- Never assume that power has been disconnected from a circuit; always check.
- Do not perform any action that creates a potential hazard to people or makes the equipment unsafe.
- Carefully examine your work area for possible hazards such as moist floors, ungrounded power extension cables, and missing safety grounds.

In addition, use the guidelines that follow when working with any equipment that is disconnected from a power source but still connected to telephone wiring or other network cabling.



**Warning** Do not work on the system or connect or disconnect cables during periods of lightning activity. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

## Site Requirements

This section discusses the site environment requirements for the switch chassis.

The environmental monitor in the switch protects the system and components from potential damage from overvoltage and overtemperature conditions. To assure normal operation and avoid unnecessary maintenance, plan your site configuration and prepare your site *before* installation. After installation, make sure the site maintains an ambient temperature of 32 to 104 F (0 to 40 C), and keep the area around the chassis as free from dust as is practical.

The Catalyst 2900 should be installed in an enclosed, secure area such as a wiring closet. The wiring closet provides security, ensuring that only qualified personnel have access to the switch and control of the environment.



**Warning** To prevent the switch from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of 104 F (40 C). To prevent airflow restriction, allow at least 3 inches (7.6 cm) of clearance around the ventilation openings. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

## AC Power

The 175W, AC-input power supply uses a power factor corrector (PFC) that allows it to operate on input voltage and current within the ranges of 100 to 240 VAC and 47 to 63 Hz.



**Warning** Do not touch the power supply when the power cord is connected. For systems with a power switch, line voltages are present within the power supply even when the power switch is off and the power cord is connected. For systems without a power switch, line voltages are present within the power supply when the power cord is connected. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

## Site Requirements

---



**Warning** Unplug the power cord before you work on a system that does not have an on/off switch. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”



**Warning** This product relies on the building’s installation for short-circuit (overcurrent) protection. Ensure that a fuse or circuit breaker no larger than 120 VAC, 15A U.S. (240 VAC, 10A international) is used on the phase conductors (all current-carrying conductors). Special note for Germany only: The electrical rating for the main circuit breaker or fuse should be 240 VAC, 16A. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”



**Warning** A voltage mismatch can cause equipment damage and may pose a fire hazard. If the voltage indicated on the label is different from the power outlet voltage, *do not connect the chassis to that receptacle*. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”



**Warning** Care must be given to connecting units to the supply circuit so that wiring is not overloaded. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

Note the power consumption rating in Table A-1 in the appendix “System Specifications” for each unit before it is connected.



**Caution** The power outlet must be installed near the equipment and must be easily accessible.



**Warning** This equipment is intended to be grounded. Ensure that the host is connected to earth ground during normal use. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

## Plant Wiring

The following are guidelines for setting up the plant wiring and cabling at your site. When planning the location of the new system, consider the distance limitations for signaling, electromagnetic interference (EMI), and connector compatibility.

## Interference Considerations

When wires are run for any significant distance in an electromagnetic field, interference can occur between the field and the signals on the wires. This fact has two implications for the construction of plant wiring:

- Bad plant wiring can result in radio frequency interference (RFI).
- Strong EMI, especially when it is caused by lightning or radio transmitters, can destroy the signal drivers and receivers in the switch, and can even create an electrical hazard by conducting power surges through lines and into equipment. (Review the safety warnings in the section “Safety with Electricity” earlier in this chapter.)

---

**Note** To predict and remedy strong EMI, you may need to consult experts in RFI.

---

If wires exceed recommended distances, or if wires pass between buildings, give special consideration to the effect of a lightning strike in your vicinity. The electromagnetic pulse (EMP) caused by lightning or other high-energy phenomena can easily couple enough energy into unshielded conductors to destroy electronic devices. If you have had problems of this type in the past, you may want to consult experts in electrical surge suppression and shielding.

Most data centers cannot resolve the infrequent but potentially catastrophic problems just described without pulse meters and other special equipment. These problems can take a great deal of time to identify and resolve, so take precautions by providing a properly grounded and shielded environment, and pay special attention to issues of electrical surge suppression.

## Site Requirements

---

### Distance Limitations

The length of your networks and the distances between connections depend on the type of signal, the signal speed, and the transmission media (the type of cabling used to transmit the signals). For example, fiber-optic cable has a greater channel capacity than twisted-pair cabling. The distance and rate limits in this chapter are the IEEE recommended maximum speeds and distances for signaling. If you understand the electrical problems that may arise and can compensate for them, you should get good results with rates and distances greater than those described here; however, do so at your own risk. The following distance limits are provided as guidelines for planning your network connections before installation.

### Ethernet and Fast Ethernet Connections

The maximum distances for Ethernet network segments and connections depend on the type of transmission cable used; for example, unshielded twisted-pair (10BaseT). The IEEE recommends a maximum distance of 328 feet (100 meters) between station (connection) and switch for 10BaseT connections using category 5 UTP. See Table 2-1 for maximum cable distances.

**Table 2-1      Ethernet Maximum Transmission Distances**

<b>Transceiver Speed</b>	<b>Cable Type</b>	<b>Duplex Mode</b>	<b>Maximum Distance Between Stations</b>
100 Mbps	Category 5 UTP	Full and half	328 feet (100 meters)
100 Mbps	Multimode fiber	Full	1.2 miles (2 km)
100 Mbps	Multimode fiber	Half	1,312 feet (400 meters)



### Multimode Power Budget Example with Sufficient Power for Transmission

The following is an example of multimode power budget calculations based on the following variables:

Length of multimode link = 3 kilometers (km)

4 connectors

3 splices

Higher order loss (HOL)

Clock recovery module (CRM)

Estimate the power budget as follows:

$$\text{PB} = 11.5 \text{ dB} - 3 \text{ km (1.0 dB/km)} - 4 (0.5 \text{ dB}) - 3 (0.5 \text{ dB}) - 0.5 \text{ dB (HOL)} - 1 \text{ dB (CRM)}$$

$$\text{PB} = 11.5 \text{ dB} - 3 \text{ dB} - 2 \text{ dB} - 1.5 \text{ dB} - 0.5 \text{ dB} - 1 \text{ dB}$$

$$\text{PB} = 2.5 \text{ dB}$$

The value of 2.5 dB indicates that this link would have sufficient power for transmission.

### Using Statistics to Estimate the Power Budget

Statistical models more accurately determine the power budget than the worst-case method. Determining the link loss with statistical methods requires accurate knowledge of variations in the data link components. Statistical power budget analysis is beyond the scope of this document. For further information, refer to User-Network Interface (UNI) Forum specifications, International Telecommunications Union Telecommunications Standardization Sector (ITU-T) standards, and your equipment specifications.

---

**Note** The ITU-T carries out the functions of the former Consultative Committee for International Telegraph and Telephone (CCITT).

---

## Site Requirements

---

### For Further Reference

The following publications contain information on determining attenuation and power budget:

- T1E1.2/92-020R2 ANSI, the Draft American National Standard for Telecommunications entitled “*Broadband ISDN Customer Installation Interfaces: Physical Layer Specification.*”
- *Power Margin Analysis*, AT&T Technical Note, TN89-004LWP, May 1989.

### Serial Connections

As with all signaling systems, serial signals can travel a limited distance at any given bit rate; generally, the slower the baud rate, the greater the distance. Table 2-2 shows the standard relationship between baud rate and distance for EIA/TIA-232 signals.

**Table 2-2** IEEE Standard EIA/TIA-232 Transmission Speed Versus Distance

Rate (bps)	Distance (Feet)	Distance (Meters)
2400	200	60
4800	100	30
9600	50	15
19200	25	7.6
38400	12	3.7
56000	8.6	2.6

---


**Note** The Catalyst 2900 supports a baud rate of 9600 bps. This table is included for reference only.

---

## Equipment Racks

A standard rack-mount kit is provided for mounting the switch in a standard 19-inch equipment rack. The rack-mount kit is not suitable for use with telco-type equipment racks or those with obstructions (such as a power strip) that could impair access to the switching modules and power supplies. Figure 2-2 show the chassis footprint and outer dimensions.

**Figure 2-2 Chassis Footprint and Outer Dimensions**

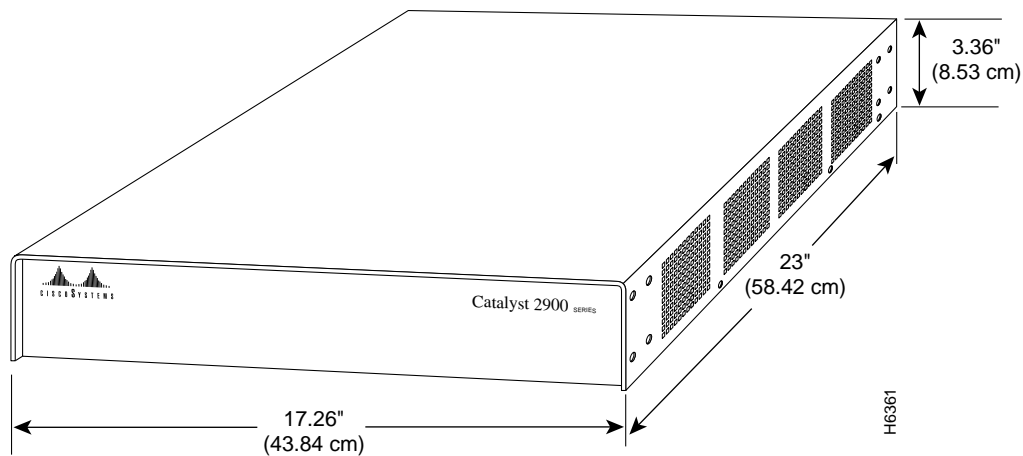

To use the standard rack-mount kit, your equipment rack must meet the following requirements:

- The width of the rack, between the two front mounting strips or rails, must be 17.75 inches.
- The depth of the rack, between the front and rear mounting strips, must be at least 19.25 inches but not more than 32 inches.
- The height of the chassis is approximately 3.4 inches. The rack must have sufficient vertical clearance to insert the chassis.

## Site Requirements

---

When planning your rack installation, consider the following guidelines:

- The ports for cooling air are located on both sides of the chassis, so multiple switches can be rack-mounted with little or no vertical clearance. However, avoid placing the switch in an overly congested rack.
- Consider the equipment and cabling that is already installed in the rack. Ensure that cables from other equipment will not obstruct the airflow through the chassis or impair access to the power supplies or switching modules.
- Install heavier equipment in the lower half of the rack to maintain a low center of gravity.
- If you plan to use an equipment shelf, ensure that the shelf is constructed to support the weight and dimensions of the chassis. Figure 2-2 shows the chassis footprint, which you will need if you are designing a customized shelf.



**Warning** To prevent overheating the switch, do not operate it in an area that exceeds the maximum recommended ambient temperature of 104 F (40 C). To prevent airflow restriction, allow at least 3 inches (7.6 cm) of clearance around the ventilation openings. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”



**Caution** Never install the switch in an enclosed rack that is not properly ventilated or air-conditioned.



**Warning** To prevent bodily injury when mounting or servicing the unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

- If it is the only unit in the rack, the unit should be mounted at the bottom of the rack.
- When mounting the unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.

- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

In addition to the preceding guidelines, review the precautions for avoiding overtemperature conditions in the section “Equipment-Rack Ventilation” later in this chapter.

## Site Environment

The switch operates as a standalone system mounted in a rack in a secure wiring closet. It requires a dry, clean, well-ventilated, and air-conditioned environment. An internal fan assembly pulls cooling air through the chassis from the right side (intake) to the left side (exhaust) when facing the front of the system. The flow of ambient air must be maintained to ensure normal operation. If the airflow is blocked or restricted, or if the intake air is too warm, an overtemperature condition can occur. Under extreme conditions, the environmental monitor will shut down the system to protect the system components.

To ensure normal operation and avoid unnecessary maintenance, plan your site configuration and prepare your site *before* installation. After installation, make sure the site maintains an ambient temperature of 0 to 40 C (32 to 104 F), and keep the area around the chassis as free from dust as is practical. For a description of the environmental monitor and status levels, refer to the section “Environmental Monitoring and Reporting Functions” in the chapter “”

If the temperature of the room air drawn into the chassis is higher than desirable, the air temperature inside the chassis may also be too high. This condition can occur when the wiring closet or rack in which the chassis is mounted is not ventilated properly, when the exhaust of one device is placed so it enters the air intake vent of the chassis, or when the chassis is the top unit in an unventilated rack. Any of these conditions can inhibit airflow and create an overtemperature condition.

Multiple switches can be rack-mounted with little or no clearance above and below the chassis. However, when mounting a switch in a rack with other equipment or when placing it on the floor with other equipment located close by, ensure that the exhaust from other equipment does not blow into the intake vent of the chassis.

Table 2-3 lists the operating and nonoperating environmental site requirements. To maintain normal operation and ensure high system availability, maintain an ambient temperature and clean power at your site. The following ranges are those within which the

## Site Requirements

---

switch will continue to operate; however, a measurement that is approaching the minimum or maximum of a range indicates a potential problem. You can maintain normal operation by anticipating and correcting environmental anomalies before they exceed the maximum operating range.

- Operating temperature range: 32 to 104 F (0 to 40 C).
- Operating humidity range: 10 to 90 percent, noncondensing.
- Airflow: Cooling air is drawn in through the right side of the chassis. Keep the right side clear of obstructions, including dust, and away from the exhaust ports of other equipment.

**Table 2-3 Specifications for Operating and Nonoperating Environments**

	Minimum	Maximum
Temperature, ambient operating	32 F (0 C)	104 F (40 C)
Temperature, ambient nonoperating and storage	-4 F (-20 C)	149 F (65 C)
Humidity (RH), ambient (noncondensing) operating	10%	90%
Humidity (RH), ambient (noncondensing) nonoperating and storage	5%	95%
Altitude, operating and nonoperating	Sea level	10,000' (3050 m)
Vibration, operating	5–200 Hz, 0.5 g (1 octave/min.)	
Vibration, nonoperating	5–200 Hz, 1 g (1 octave./min.) 200–500 Hz, 2 g (1 octave/min.)	

## Preventive Site Configuration

Planning a proper location for the switch and the layout of your equipment rack or wiring closet is essential for successful system operation. Equipment placed too close together or inadequately ventilated can cause system overtemperature conditions. In addition, chassis

panels made inaccessible by poor equipment placement can make system maintenance difficult. Following are precautions that can help avoid problems during installation and ongoing operation.

### General Precautions

Follow these general precautions when planning your equipment locations and connections:

- The environmental monitor continuously checks the interior chassis environment and provides warnings for high temperature and reports any occurrences. If warning messages are displayed, take immediate action to identify the cause and correct the problem. Use the **show system** command regularly to check the internal system status. (Refer to the section “Environmental Monitoring and Reporting Functions” in the chapter “”)
- Keep the front of the chassis free from obstructions and away from the exhaust air of other equipment. Remember that electrical equipment generates heat, and ambient room temperature alone may not be adequate to cool equipment to acceptable operating temperatures.
- Follow ESD prevention procedures to avoid damage to equipment. Damage from static discharge can cause immediate or intermittent equipment failure.

### Equipment-Rack Ventilation

If you plan to install the switch in an equipment rack, follow these precautions to avoid overtemperature conditions. See also the guidelines that are provided in the section “Equipment Racks” earlier in this chapter:

- Install the chassis in an enclosed rack only if it has adequate ventilation or an exhaust fan; use an open rack whenever possible.
- A ventilation system that is too powerful in a closed rack may also prevent cooling by creating negative pressure around the chassis and redirecting the air away from the chassis intake vent. If necessary, operate the chassis with the rack open.

## Preparing Network Connections

---

- The correct use of baffles inside the enclosed rack can assist in cooling the chassis.
- Equipment near the bottom of a rack may generate excessive heat that is drawn upward and into the intake ports of equipment above, leading to overtemperature conditions in the chassis at or near the top of the rack.

For a functional description of the environmental monitor and the status levels, refer to the section “Environmental Monitoring and Reporting Functions,” in the chapter “What Is the Catalyst 2900?”

## Power

Take the following precautions when planning power connections to the switch:

- Check the power at your site before installation and, periodically, after installation to ensure that you are receiving clean power. Install a power conditioner if necessary.



**Warning** The device is designed to work with TN power systems. To see translated versions of this warning, refer to the appendix “Translated Safety Warnings.”

- Install proper grounding to avoid damage from lightning and power surges.

## Preparing Network Connections

When preparing your site for network connections to the switch, you must consider numerous factors related to each type of interface:

- Type of cabling required for each type (fiber or twisted-pair cabling).
- Distance limitations for each signal type.
- Specific cables you need to connect each interface.
- Any additional interface equipment you need, such as transceivers or modems. Before installing the switch, have all additional external equipment and cables on hand. If you intend to build your own cables, refer to the cable pinouts in the appendix “Cabling Specifications.”




## Network Cabling Components

The network cabling components shown in Figure 2-3 consist of the following:

- Network backbone—A vertical or horizontal connection between floors of the building or between buildings in a campus environment.
- Distribution field—Provides the cross connection between the Ethernet switching module connections and the individual station's wiring.
- Station wiring—Provides the connection from the wiring closet to the modular wall outlets.
- Modular wall outlets—Provide connection to the network.

**Figure 2-3 Network Cabling Components**

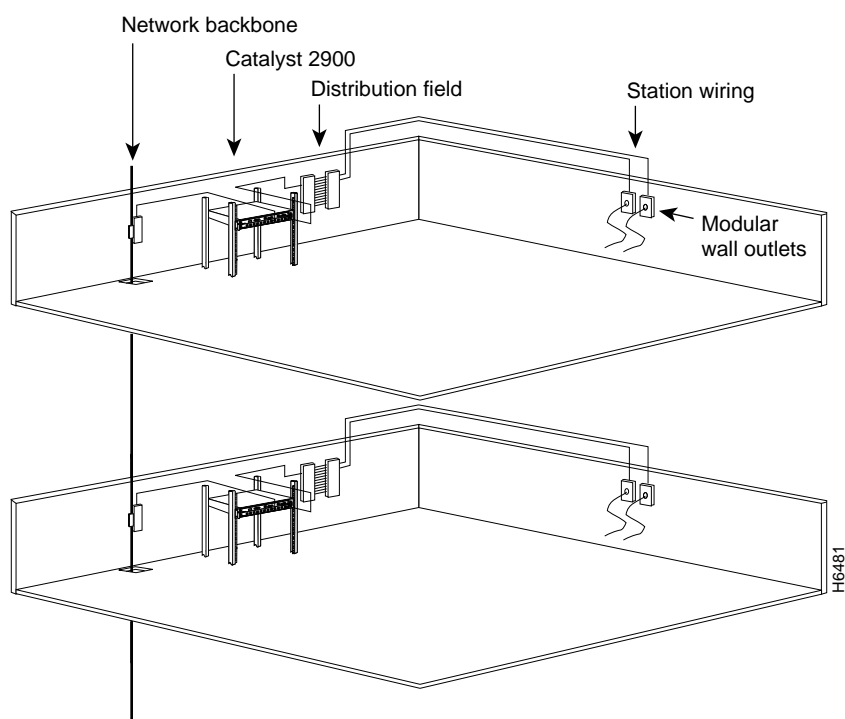

### Additional and Optional Connection Equipment

You may need some of the following data communications equipment to complete your installation:


- To install and configure the switch, use a terminal with an EIA/TIA-232 data terminal equipment (DTE) port and an EIA/TIA-232 data communications equipment (DCE) console cable with DB-25 plugs at one end. You can detach the terminal (and cable) after the installation and configuration procedures are complete.
- To use an IEEE 802.3 or Ethernet interface (thick-wire or thin-wire) at your installation, you need an Ethernet transceiver and transceiver cable.

### Ethernet Connection Equipment


You will need an Ethernet transceiver and transceiver cable between each Ethernet port and the Ethernet network. You can use three different Ethernet connectors:

- RJ-45 male connectors to connect twelve 10/100 Ethernet ports. (See Figure 2-4.)
- 40-pin MII male connectors to 100 Mbps Ethernet.
- SC-type fiber-optic connectors to connect twelve 100-Mbps Ethernet connections. (See Figure 2-5.)

**Figure 2-4 Ethernet RJ-45 Interface Cable Connectors**

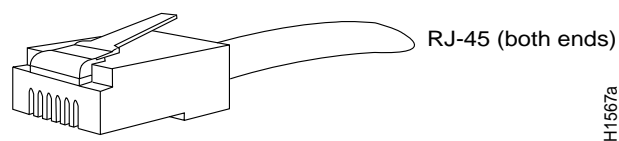


**Figure 2-5      Multimode Fiber-Optic Fast Ethernet Connector (SC Type)**

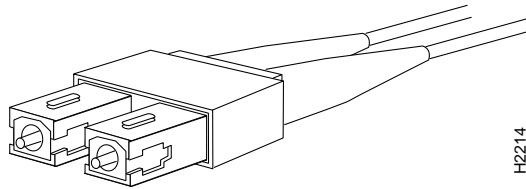

For multimode fiber-optic cabling (100BaseFX at 100 Mbps), Fast Ethernet transceivers are available from a variety of sources. Figure 2-6 shows examples of transceivers and connection equipment. You can connect either Ethernet Version 1 or Version 2/IEEE 802.3 interfaces; the switch automatically supports both types.


**Figure 2-6 Fast Ethernet Transceivers and Connection Equipment**

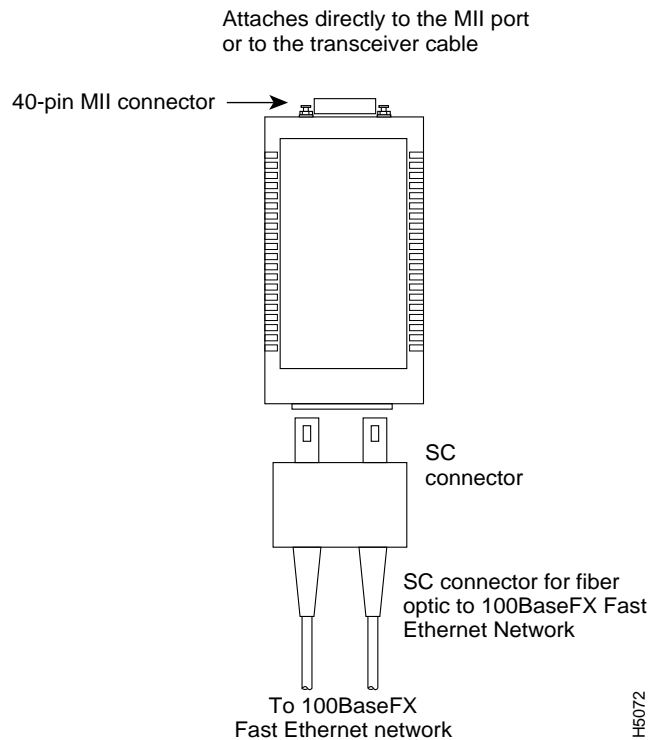

When planning your connections, consider the types and locations of connectors on adjacent switching modules to avoid having the transceiver overlap and impair access to other connections.

For UTP and fiber optic cabling, Fast Ethernet transceivers are available from a variety of sources. Figure 2-7 shows examples of transceivers and connection equipment. You can connect either Ethernet Version 1 or Version 2/IEEE 802.3 interfaces; the switch automatically supports both types.

**Figure 2-7 Fast Ethernet Transceivers and Connection Equipment**

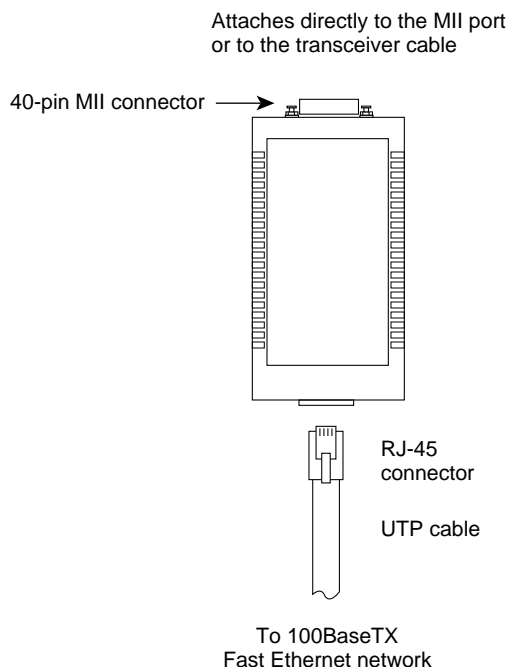

H6684

## Console Port Connection Equipment

The supervisor engine module contains an EIA/TIA-232 asynchronous console port (DB-25 receptacle). Synchronous transmission uses precise timing to synchronize transmissions between the transmitter and receiver, and maintains separate clock and data signals. Asynchronous transmission uses control bits instead of a precise clock signal to indicate the beginning and end of characters.

When connecting a serial device, consider the cable as an extension of the switch for an external connection; therefore, use null-modem cable to connect the switch to a remote DCE device such as a modem or data service unit (DSU), and use a straight-through cable to connect the switch to a DTE device such as a terminal or PC.

## Unpacking and Repacking the System

---

You will need a terminal to configure the interfaces and bring up the system. You will also need an EIA/TIA-232 DCE console cable to connect the terminal to the console port on the supervisor engine module. After you establish normal operation, you can disconnect the terminal. Both ends of the console cable should be EIA/TIA-232 plugs to enable you to connect to the supervisor engine module DCE console port DB-25 receptacle and to the DB-25 receptacles used on the DTE ports on most terminals.

Before you connect a terminal to the console port, configure the terminal to match the switch console port, as follows:

- 9600 baud
- 8 data bits
- No parity
- 1 stop bit

## Unpacking and Repacking the System

Unpacking instructions are provided in the document *Unpacking Instructions*, which is attached to the outside of the shipping container; you should have already read that document and followed the procedures to unpack your Catalyst 2900. Proceed to the next section “Checking the Contents,” to verify that you have received everything.

---

**Note** Do not discard the shipping container when you have unpacked the switch. Flatten the shipping cartons and store them with the pallet. You will need these containers if you need to move or ship the switch in the future.

---

### Checking the Contents

Take the following steps to check the contents of your Catalyst 2900 package:

- Step 1** Check the contents of the accessories box and the packing slip and verify that you received all listed equipment.
- Switch hardware and software documentation, if ordered
  - Optional equipment that you ordered, such as network interface cables, transceivers, or special connectors
- Step 2** Check the switching modules in each slot. Ensure that the configuration matches the packing list and that all the interfaces are included.
- Step 3** Proceed to the chapter “Rack-Mounting Instructions” to begin installation.

### Repacking the System


In the event you need to return or move the Catalyst 2900, the following instructions describe repacking the switch using the original packaging material:

- Step 1** Set the Catalyst 2900 in the bottom pallet. (See Figure 2-8.)
- Step 2** Place the top packing material over the top of the Catalyst 2900.
- Step 3** Place both accessory boxes on the top packing material.
- Step 4** Place the outside carton over the entire package.
- Step 5** Fold the outside carton down over the top of the accessory boxes and seal with packing tape.
- Step 6** Wrap two packaging straps tightly around the top and bottom of the package to hold the outside carton and the bottom pallet together. (See Figure 2-9.)

## Unpacking and Repacking the System


---

**Figure 2-8 Catalyst 2900 Packing Material**

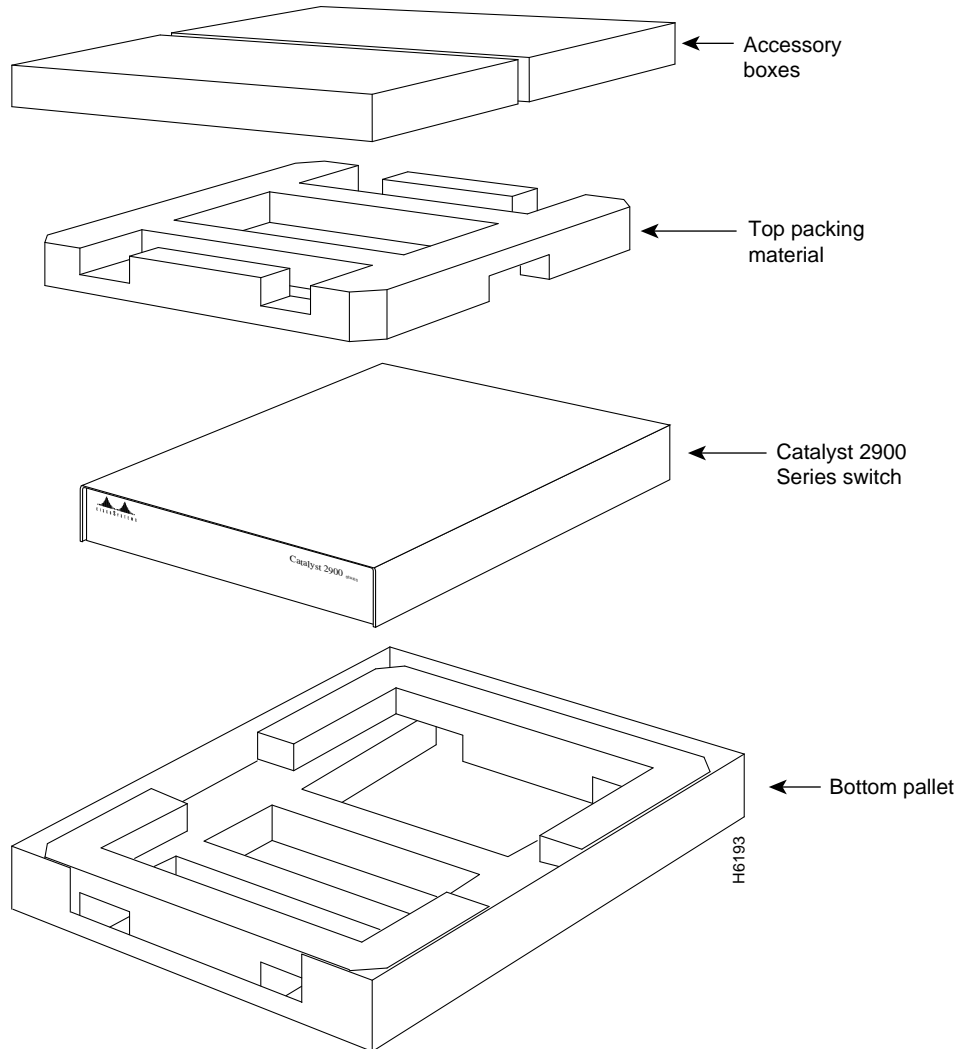



**Figure 2-9**      **Final Package**

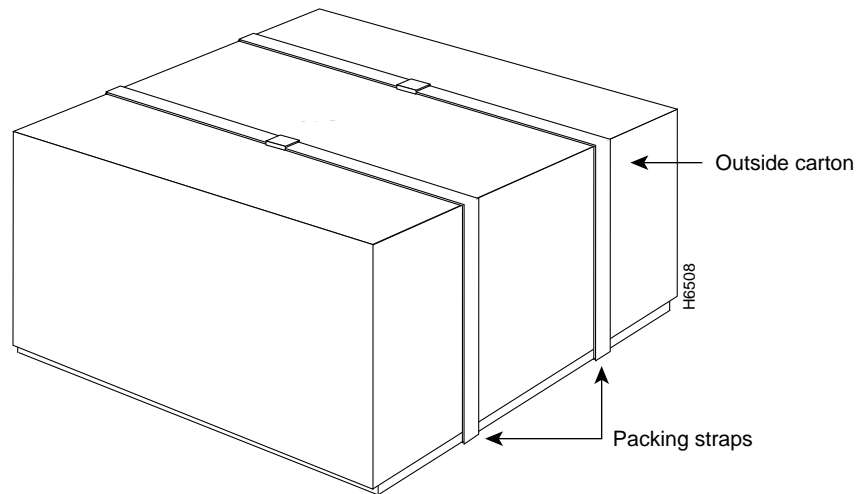

---

**Note** Do not use tape to hold the outside carton to the bottom pallet. Packaging straps must be added to hold the entire package together and to add strength to the package.

---

## Unpacking and Repacking the System

---