

# FastHub 108T/104T Connectors

---

This appendix describes the FastHub 108T/104T connectors.

The FastHub 108T/104T ports use standard RJ-45 connectors. The arrangement of the pins and the pinouts is shown in Figure B-1.

---

**Figure B-1**      **RJ-45 Connector**

The shell for each connector is connected to the chassis ground. The 100Base-TX ports have their transmit (TD) and receive (RD) pairs internally crossed for attachment to an adapter using a straight-through cable. The straight-through and crossover-cable schematics are shown in Figure B-2.

---

**Figure B-2      Cable Schematics**

