


FastHub 116C Connectors

This appendix describes the FastHub 116C connectors.

100Base-FX Connector

Port 16 uses a standard ST connector. The arrangement of the pins is shown in Figure B-1.

Figure B-1 100Base-FX Connector

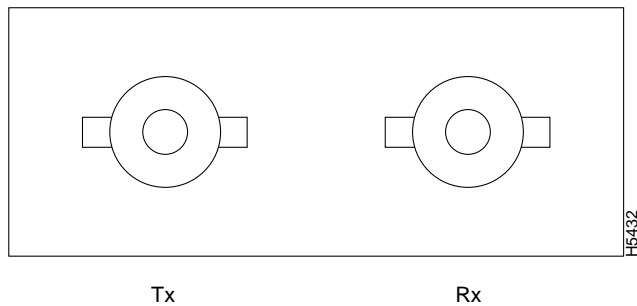

100Base-TX Connector

Ports 1 through 15 use standard RJ-45 connectors. The arrangement of the pins is shown in Figure B-2 and the pinouts are shown in Table B-1.

Figure B-2 RJ-45 Connectors

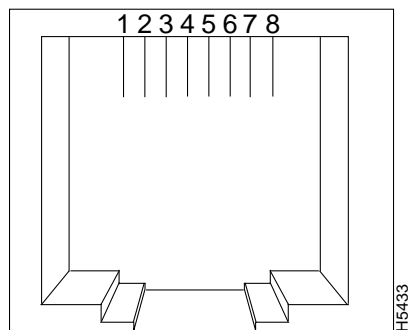


Table B-1 100Base-TX Connector Pinouts

| Pin | Function |
|-----|----------|
| 1 | RD+ |
| 2 | RD- |
| 3 | TD+ |
| 4 | NC |
| 5 | NC |
| 6 | TD- |
| 7 | NC |
| 8 | NC |

The shell for each connector is connected to the chassis ground. The 100Base-TX ports have their transmit (TD) and receive (RD) pairs internally crossed (shown with an **x**) for attachment to an adapter using a straight-through cable. The straight-through and crossover cable schematics are shown in Figure B-3 and Figure B-4.

Figure B-3 Straight-Through Cable Schematic


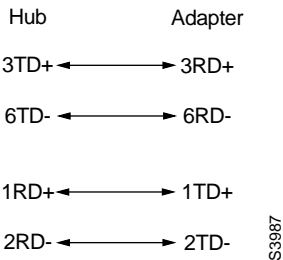


Figure B-4 Crossover Cable Schematic

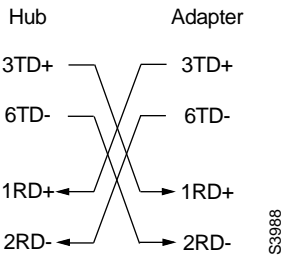

100Base-TX Connector
