

Hardware Configuration

This chapter shows how to set jumpers and switches in LightStream 2020 hardware, and explains how many of each major hardware component—NPs, switch cards, line cards, and power supplies—can coexist in a LightStream 2020 multiservice ATM switch (LS2020 switch).



Caution Before removing any components from the chassis, read the “Safety Instructions” section in the chapter entitled “Hardware Troubleshooting.” If you handle components without taking proper ESD precautions, you can damage the system.

Setting Jumpers and Switches on Access Cards

This section explains how to set jumpers and switches on I/O access cards. It includes these procedures:

- “Setting LSAC Interface Jumpers”
- “Setting SAC Interface Jumpers”
- “Setting CEMAC Interface Jumpers”
- “Turning Off the Transmit Laser on the OC3AC”

Setting LSAC Interface Jumpers

This section describes the user-settable jumpers on the low-speed access card (LSAC) and shows how to set them. The jumpers allow you to select one of two interface types:

- V.35
- RS-449/X.21 (If you select this option, the fantail determines whether the ports are RS-449 or X.21.)

These jumpers are set for you in the factory based on the configuration specified in your system order, so you should not have to change the jumpers unless you change your configuration.

Figure 4-1 shows the location of the 16 sets of interface jumpers on the card, and illustrates how to set them. For V.35, put jumpers on the left and center pins. For RS-449 and X.21, put jumpers on the right and center pins. (The settings are indicated on the card, as shown.) Note that in Figure 4-1 the card is configured to provide RS-449/X.21 interfaces for ports 4 through 7, and V.35 interfaces for ports 0 through 3.


Each LSAC serves up to eight I/O ports. If you want all eight ports to use the same interface, set all the jumpers the same way. If you prefer, you can set the LSAC to give you four ports of one type and four of another (four V.35 and four X.21, for example). You will need one fantail of each type.

The interface jumpers are labelled E1 through E8 and E11 through E18. (E9 and E10 are not interface jumpers and are not located near the interface jumpers on the card.) The interface jumpers can be divided functionally into two groups:

- The top eight jumpers, E1 through E8, affect ports 4 through 7, which are served by the top connector on the front edge of the card.
- The bottom eight jumpers, E11 through E18, affect ports 0 through 3, which are served by the bottom connector on the front edge of the card.

(The two connectors on the front edge of the card are labelled with the numbers of the ports they serve. Each connector can be attached to a fantail that provides four I/O ports.)

Figure 4-1 Interface Jumpers on Low-speed Access Card

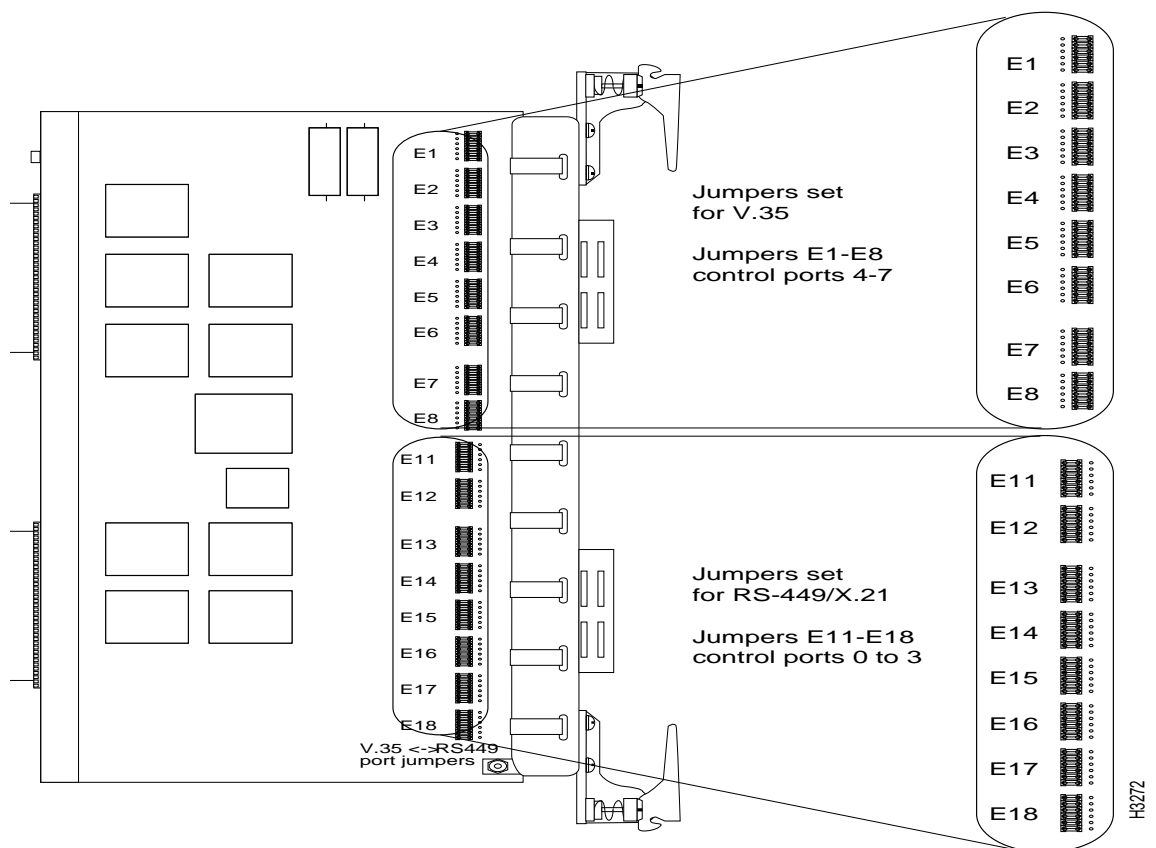

Setting SAC Interface Jumpers

This section describes the user-settable jumpers on the serial access card (SAC) and shows how to set them. The jumpers allow you to select one of two interface types:

- V.35.
- RS-449/X.21. (If you select this option, the fantail determines whether the ports are RS-449 or X.21.)

These jumpers are set for you in the factory based on the configuration specified in your system order, so you should not have to change the jumpers unless you change your configuration.

Each SAC serves up to eight I/O ports. For all eight ports to use the same interface, use the same settings for all the jumpers. If you set the SAC to give you four ports of one type and four of another (for example, four V.35 and four RS-449), you will need one fantail of each type. If you will use the card for X.21, consider devoting the whole card to that interface so as to use the full capacity of the X.21 fantail.

The interface jumpers can be divided functionally into two groups:

- The top eight jumpers, E1 through E8, affect ports 4 through 7, which are served by the top connector on the front edge of the card.
- The bottom eight jumpers, E9 through E16, affect ports 0 through 3, which are served by the bottom connector on the front edge of the card.

(The two connectors on the front edge of the card are labelled with the numbers of the ports they serve. Each connector can be attached to a fantail that provides four I/O ports.)


The board contains two sizes of jumpers: small jumpers (covering 12 pins) and large jumpers (covering 36 pins). To reach the large jumpers, you may need to remove the bulkhead. To do this, remove the screws immediately above and below each I/O connector and remove the two screws attached to the bulkhead on the underside of the card.

Position the jumpers as follows:

- For V.35, each small jumper must cover all 12 of its pins; the large jumpers must cover the two left-most columns of pins. (See the top group of jumpers in Figure 4-2.)
- For RS-449/X.21, put the small jumpers into storage position by placing them over only the left pins; place the large jumpers to cover only the two right-most columns of pins. (See the bottom group of jumpers in Figure 4-2.)

Figure 4-2 shows a card configured to provide RS-449/X.21 interfaces for ports 0 to 3 and V.35 interfaces for ports 4 to 7.

Figure 4-2 Interface Jumpers on Serial Access Card

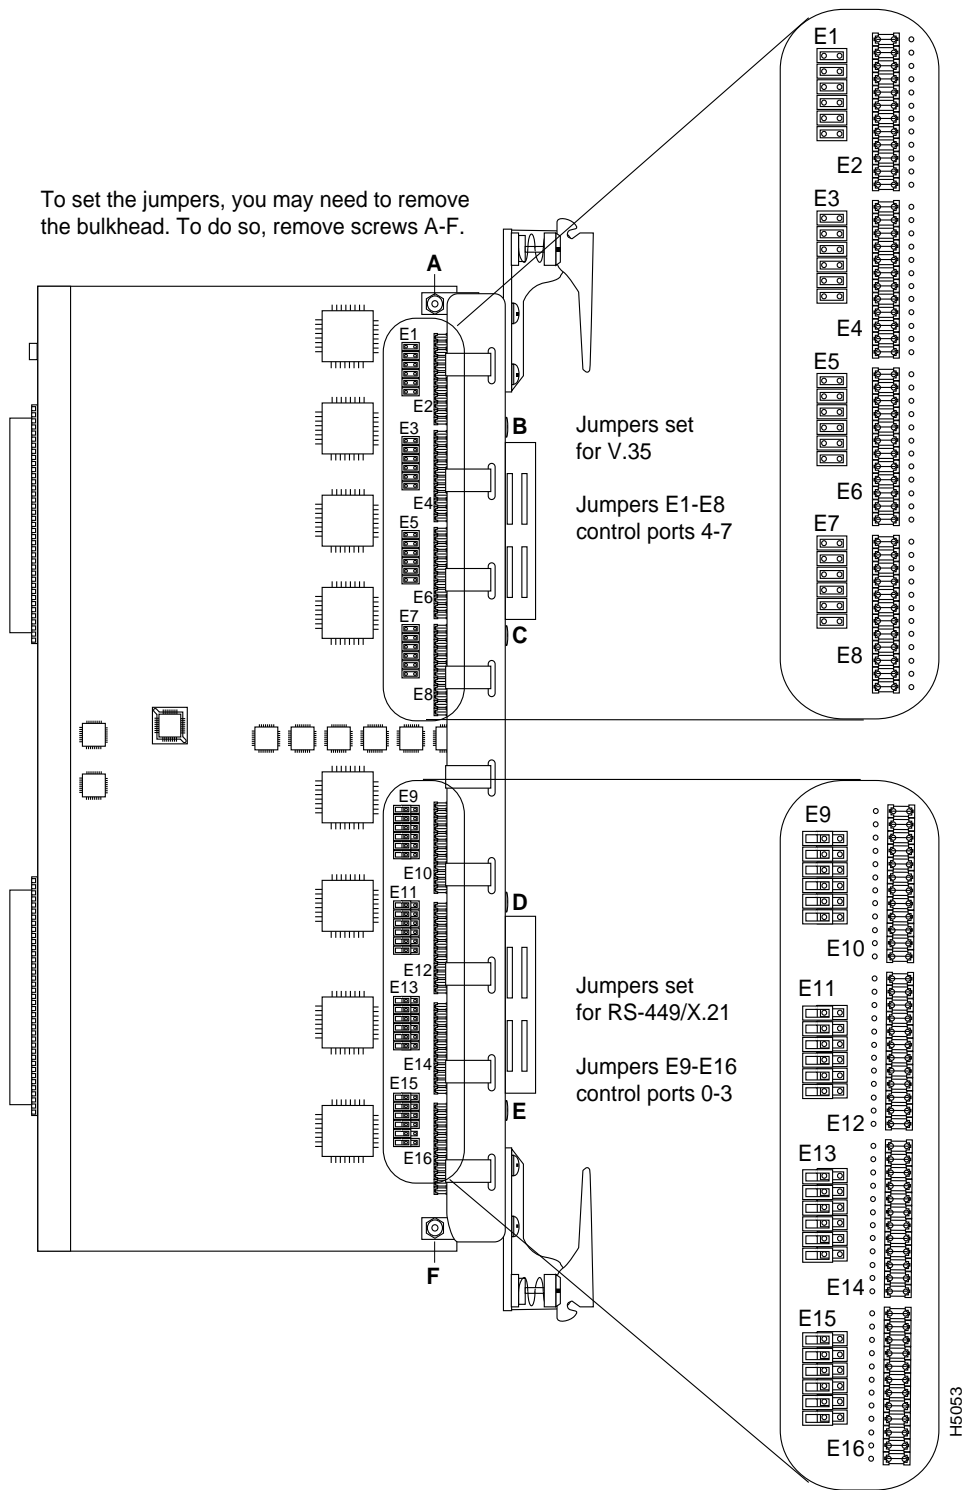

Setting CEMAC Interface Jumpers

This section describes the user-settable jumpers on the E1 circuit emulation access card (E1 CEMAC) and shows how to set them.

The jumpers allow you to select termination impedance and grounding on the receive line and pulse amplitude and grounding on the transmit line. There are two possible settings: use one if you plan to attach the CEMAC to a fantail, and use the other if you plan to use the CEMAC without a fantail. The jumper settings are described below.

Settings for Use with a Fantail

If you use a fantail, the CEMAC card must be set to use 75-ohm settings for termination impedance and pulse amplitude. This can be set by putting the termination impedance jumpers on the leftmost pins (the pins farthest away from the bulkhead) and putting the pulse amplitude jumper on the upper pins. See Figure 4-3.

Settings for Use without a Fantail

If you do not plan to use a fantail, use the default settings, which are as follows: the termination impedance and pulse amplitude jumpers are set to 120 ohms, and the transmit and receive lines are not grounded.


Figure 4-3 shows the eight sets of interface jumpers on the card and illustrates how to set them. (The settings are indicated on the card, as shown.) Note that the card shown is configured to the factory default settings.

The interface jumpers are labelled E1 through E32. The jumpers associated with each port are shown in Table 4-1.

Table 4-1 E1 CEMAC Jumpers

Jumper	E Number							
Function	Port 0	Port 1	Port 2	Port 3	Port 4	Port 5	Port 6	Port 7
Receive Gnd	E29	E25	E21	E17	E13	E9	E5	E1
Impedance	E30	E26	E22	E18	E14	E10	E6	E2
Amplitude	E31	E27	E23	E19	E15	E11	E7	E3
Transmit Gnd	E32	E28	E24	E20	E16	E12	E8	E4

Figure 4-3 Interface Jumpers on E1 CEMAC

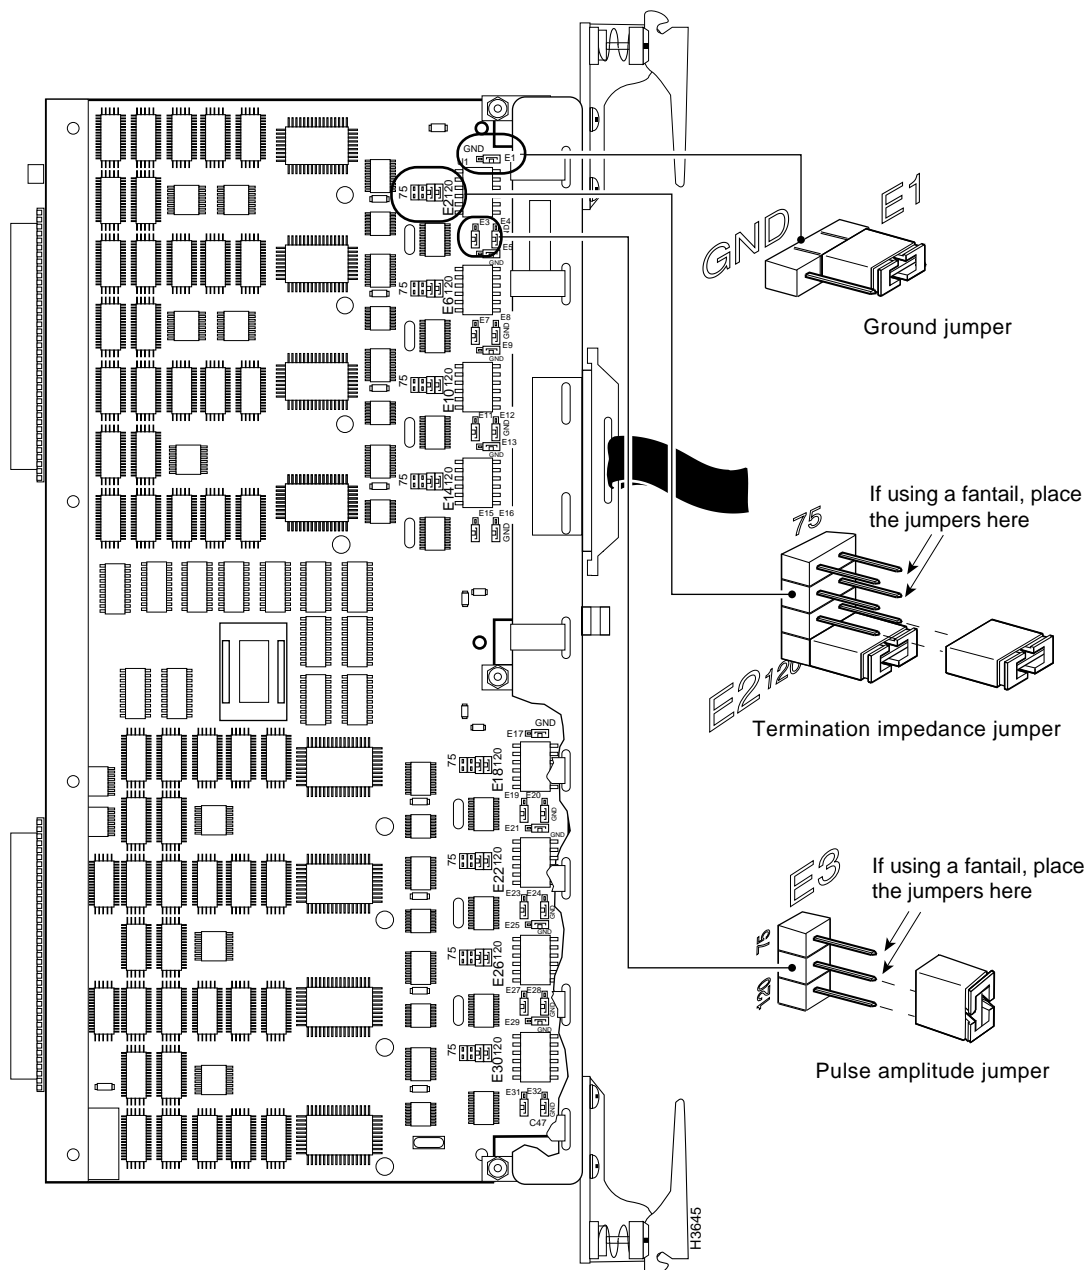

Turning Off the Transmit Laser on the OC3AC

Single-mode ports on the OC-3c access card have transmit lasers whose emissions can be dangerous to the eye. When a single-mode port is not being used, we recommend that you turn off its transmit laser. Turning off the laser turns on the port's green *Safe* LED. (When the LED is on, you know that it is safe to look at the connector for that port.)



Warning Do not look directly into the connectors on a single mode OC-3c access card whose *Safe* LED is turned off. The transmit laser can damage your eyes.

The toggle switch has two positions:


- One switch position turns the port's transmit laser off and turns the green *Safe* LED on.
- The other switch position turns the port's transmit laser on and turns the *Safe* LED off.

To turn off the laser, move the toggle switch, shown in Figure 4-4. The green *Safe* LED comes on to tell you the laser is off.



Caution If you turn off the transmit laser while the port is passing traffic, the flow of traffic halts.

Figure 4-4 Detail of Single Mode OC-3c Card Showing *Safe* LED and Transmit Laser's Toggle Switch

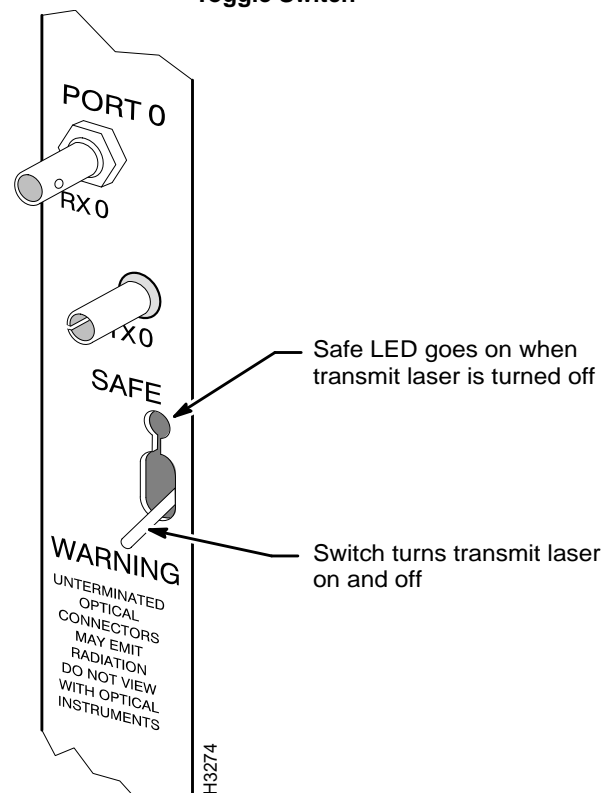

Setting Jumpers and Switches on Fantails

This section explains how to set jumpers and switches on LS2020 fantails. It includes these procedures:

- “Setting Ground Jumpers on the E1 Fantail”
- “Configuring X.21 Ports as DTE or DCE”

Setting Ground Jumpers on the E1 Fantail

The E1 fantail has two jumper positions for each port, as shown in Figure 4-5:


- Transmit ground (TX GND) — the default setting
- Receive ground (RX GND)

The transmit ground jumper setting is appropriate for most applications. If you wish to change the setting to receive ground, you can do so on a per-port basis (that is, the ports can have different settings). To change a port's ground setting from transmit to receive, do this:

Step 1 Remove the jumper from the TX GND position, as shown in the figure.

Step 2 Place the jumper in the RX GND position for the same port.

Figure 4-5 Ground Jumpers on E1 Fantail

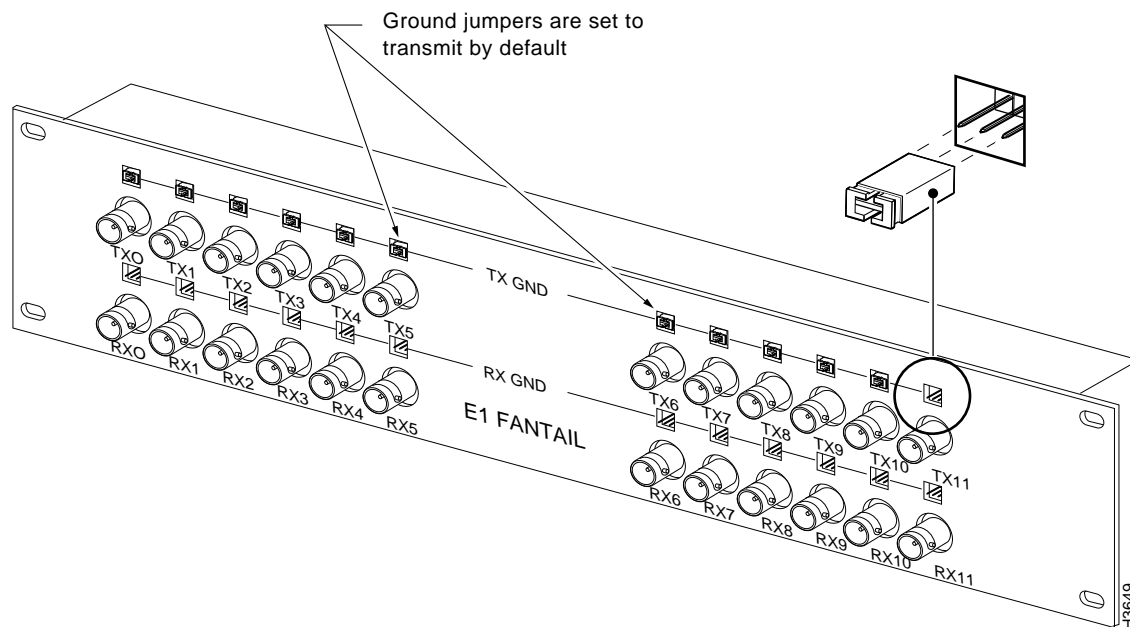

Configuring X.21 Ports as DTE or DCE


The X.21 fantail has eight ports, and each can be set to function either as DTE or as DCE. Next to each connector is a pair of slider switches with settings labelled *DTE* and *DCE* (see Figure 4-6). The two switches in each pair are linked, so it is impossible to set them to different modes. Note that in Figure 4-5 the switches are set to DTE.

Note Changing a port's DTE/DCE setting while it is operating halts the flow of traffic through the port.

To change a port's DTE/DCE setting, do the following:

- Step 1** Slide one of the port's switches to the desired position. The other switch will move at the same time.
- Step 2** If you are setting the port to DTE, attach a male-to-male gender converter to change the female connector on the fantail to a male connector.
- Step 3** Use the LS2020 configurator to change the port's configuration to reflect the new DTE/DCE mode. Refer to the *LightStream 2020 Configuration Guide* for details.

Figure 4-6 Detail of X.21 Fantail Showing Ports and DTE/DCE Switch Pairs

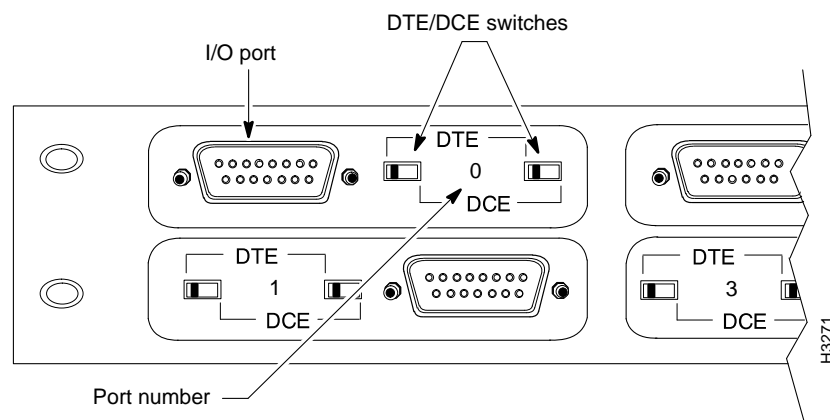

Component Configuration

Guidelines in this section help you determine how many of each major component (NPs, switch cards, line cards, and power supplies) can be installed in a single LS2020 chassis. You will find this information useful if you are considering adding line cards or redundancy to your system, or if you want to rearrange the cards in a chassis.

NPs, Switch Cards, Line Cards, Disks, and Power Trays

The number of NPs, switch cards, and bulk power trays installed in an LS2020 chassis depends on whether redundancy is desired.

- A fully redundant system has two NPs (each with its own disk assembly, including a hard disk and floppy drive), two switch cards, and two power trays.
- A partially redundant system has redundancy in some subsystems. For example, a partially redundant system might have two power trays and two NPs, but only one switch card.
- A nonredundant system has only one NP, one switch card, and one power tray.

The two power trays in a redundant system load-share, and if either one fails, the other can power the entire switch. NPs and switch cards do not load-share; only one card of each type is active at any given time. The second NP and switch card serve as hot spares. If an active NP or switch card fails, its backup takes over automatically.

The list below outlines the types of cards that can be installed in each slot in the front of an LS2020 chassis. Figure 4-7 shows the slot numbers.


- **Slot 1** NP only.
- **Slot 2** NP in a redundant configuration; any line card in a nonredundant configuration.
- **Slots 3 – 10** Line cards only.
- **Slots A and B** Switch cards only.

Filler panels are provided to cover empty slots.



Caution Although function cards (NPs and line cards) and switch cards are the same size, their midplane connectors are completely different. Do not attempt to place a function card in a switch card slot or vice versa. Attempts to do so may result in damage to the connectors on the midplane or on the cards.

Figure 4-7 Detail of Front of LS2020 Showing Slot Numbers

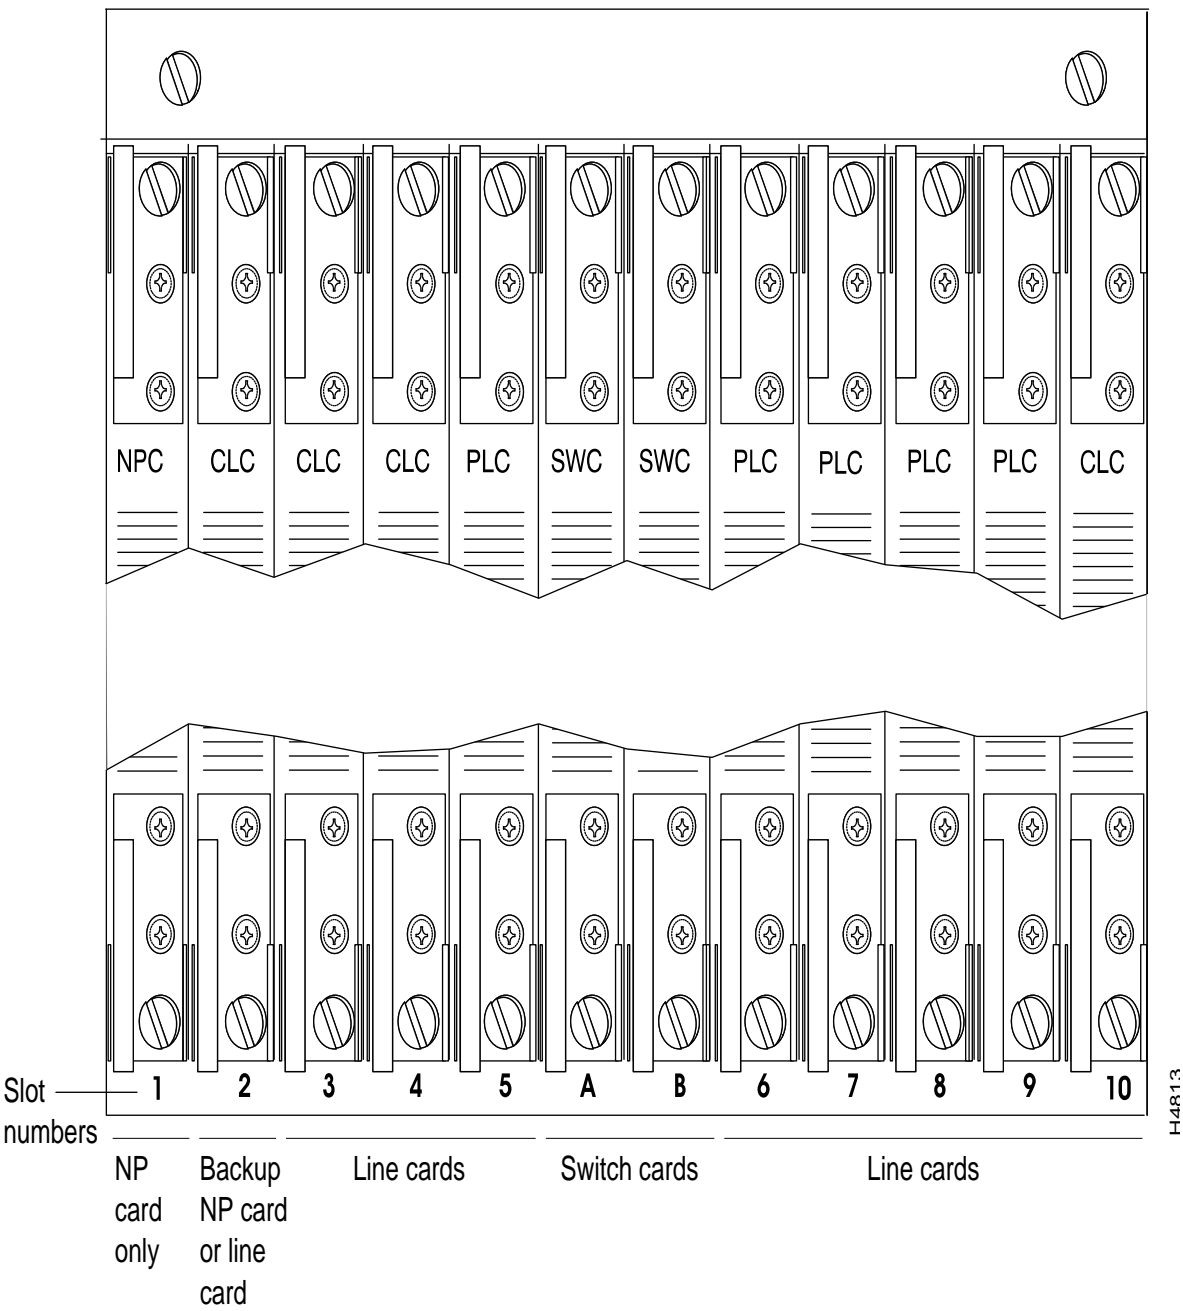

Access Cards and Console/Modem Assemblies

Up to 10 I/O access cards and two console/modem assemblies can be installed in the back of an LS2020 chassis. The type and placement of cards in the back of the chassis is determined by the cards installed in the front. Behind each NP and line card, an access card of the correct type must be installed. (Table 1-5 in the chapter “Hardware Description” matches access cards to function cards.) If there is a mismatch between the function card and access card in the same slot, the cards will not power up. A console/modem assembly must be installed behind each switch card.

Blowers

Every LS2020 switch has two blowers. (Blowers are located at the top of the chassis; one is accessible from the front, one from the rear.) If one fails, a single blower can, under normal conditions, cool the entire chassis. However, a failed blower should be replaced as soon as possible.