



About This Guide

This guide explains how to use TrueView Catalyst 1600 Manager, a management application for the Catalyst 1600 Token Ring switch.

For information about the TrueView network management platform, refer to *TrueView Applications Installation and User Guide*.

Audience

This guide is intended for network administrators who have experience with Token Ring local-area networks (LANs) and Microsoft Windows.

Structure

This guide is organized as follows:

- | | |
|-----------|--|
| Chapter 1 | Describes the TrueView network management platform, and the TrueView Catalyst 1600 Manager management application. |
| Chapter 2 | Explains how to add devices to manage with TrueView Catalyst 1600 Manager and explains how to enter the password to configure a Catalyst 1600 Token Ring switch. |
| Chapter 3 | Explains how to use TrueView Catalyst 1600 Manager to monitor and manage Catalyst 1600 devices and how to download boot code and run-time microcode to devices on the network from the management station. |

Related Publications

- | | |
|------------|---|
| Appendix A | Explains how TrueView Catalyst 1600 Manager communicates with Catalyst 1600 devices over the Simple Network Management Protocol (SNMP). |
| Appendix B | Explains the concept of virtual local-area networks (LANs), or workgroups, and provides examples of virtual LAN configurations. |
| Appendix C | Explains technical terms that appear in the document. |

Related Publications

The following documents contain related information:

- *TrueView Applications Installation and User Guide*
- *Catalyst 1600 Installation Guide*

Terminology

This guide contains the following specific terms:

Catalyst 1600 The Catalyst 1600 Token Ring switch.

Option button A button on the screen, which is either selected or clear, that you click on to indicate an option. If an option button has a black center, that indicates it is selected. If an option button has a white center, that indicates it is not selected. You can only select one option button in a group of option buttons.

Check box A box on the screen, which is typically selected or clear, that you click on to indicate an option. An 'X' in a check box indicates it is selected. You can select a check box without affecting other check boxes.

Conventions

This guide has the following conventions:

Ctrl + A	Hold down the Ctrl key and press the A key.
[]	The enclosed items are optional.
< >	The enclosed can have a variety of values.
:	Omission of part of the program or file listing that is not necessary in the present discussion.
<i>italic type</i>	Document titles.
UPPERCASE	Filenames, directory names, and disk drive names.

System Requirements

To find out the system requirements to run TrueView Catalyst 1600 Manager under TrueView, refer to the *TrueView Applications Installation and User Guide*.

Components

If any of the items you ordered are missing, please contact your supplier immediately.

Catalyst 1600 Manager includes:

- Catalyst 1600 Manager software
- *TrueView Catalyst 1600 Manager User Guide*
- *TrueView Applications Installation and User Guide*

Components
